



# REFINISH

## High Precision Polishing Technology

**Initial situation**  
Initiële situatie

**After sanding with P1500 and upwards**  
Na het schuren met P1500 en hoger





**Deep scratches**  
Diepe krassen

**Light scratches**  
Lichte krassen

**Holograms / one step polish**  
Hologrammen / polijsten in één stap

**High gloss**  
Hoogglans

For more information, the pad table and videos scan the QR  
Voor meer informatie, het padoverzicht en de video's scan de QR

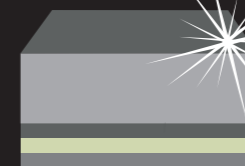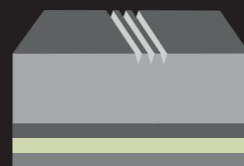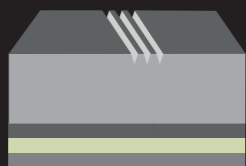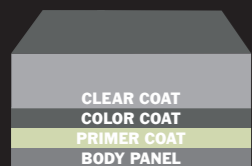

<b>DIAMOND CUT</b> 3000 REFL30 Cutting Power	<b>STEP 1</b> ROTARY ROTEREND RF2110	<b>STEP 1</b> ROTARY ROTEREND RF2110			
			<b>STEP 1</b> ROTARY ROTEREND RF2120		
		<b>STEP 2</b> DUAL ACTION EXCENTRISCH RF2156	<b>STEP 2</b> DUAL ACTION EXCENTRISCH RF2156	<b>STEP 2</b> DUAL ACTION EXCENTRISCH RF2156	<b>STEP 1</b> DUAL ACTION EXCENTRISCH RF2156
					<b>STEP 1</b> ROTARY ROTEREND RF2170
		<b>STEP 3</b> RF2211	<b>STEP 3</b> RF2211	<b>STEP 3</b> RF2211	<b>STEP 2</b> RF2211
<b>COMPOUND</b> 5000 REFL50 Cutting Power					
<b>FINAL CUT</b> 9000 REFL90 Cutting Power					
<b>ULTRA FINISH</b> 12000 REFL12 Cutting Power					
<b>WAXCOAT</b> REFLWC Cutting Power					

### PROCESSING

**Wash the car**  
Wash the car contactless with a Cartec prewash (e.g. 1407), and manually with a Cartec shampoo (e.g. 1407). Clay the car afterwards with Cartec Iron Wash (1804) and a clay pad (3041/21).

**Masking of plastic and rubber parts**  
Before polishing, all plastic parts should be masked. Otherwise, they could accidentally be polished and appear blank or even white afterwards.

**Machine polishing step by step**  
1. Apply polishing compound to the polishing pad. Do not use too much compound. Four dots of the same size are sufficient.  
2. Using the polishing pad, roughly apply the product to the surface to be polished. Then spread the polish carefully with the polisher at the lowest setting.  
3. Move the polisher with light, consistent pressure over the surfaces in what is known as a cruciform motion - first in vertical and then in horizontal movements. In the beginning it is better to work at a low speed to get a feel of the machine. Increasing the speed is always possible. Always keep the machine moving, otherwise there is a risk that the paint will become very hot and damaged in some areas.  
4. Wipe the polished surface with the color matching Cartec Microfiber Cloth.

### VERWERKING

**Was de auto**  
Was de auto contactloos met een Cartec voorreiniger (bv. 1407) en handmatig met een Cartec shampoo (bv. 12121). Klei de auto daarna met Cartec Iron Wash (1804) en een clay pad (3041/21).

**Afplakken van kunststof- en rubberdelen**  
Voor het polijsten dienen ook alle kunststof delen gemaskeerd te worden. Deze kunnen anders geraakt worden en er naderhand kaal of wit uit zien.

**Machinaal polijsten stap-voor-stap**  
1. Breng polijstpasta aan op de polijstpad. Gebruik niet te veel polijstpasta. Vier dotjes van dezelfde grootte zijn voldoende.  
2. Breng met de polijstpad het product globaal aan op het te polijsten oppervlak. Verdeel het polijstmiddel vervolgens voorzichtig over de lak met de polijstmachine op de laagste stand.  
3. Beweeg de polijstmachine met lichte, gelijkmatige druk over de oppervlakken in een zogenaamde kruisvormige beweging eerst in verticale en dan in horizontale bewegingen. In het begin is het beter om met een lage snelheid te werken om gevoel voor de machine te krijgen. Verhoging van de snelheid is altijd mogelijk. Houd de machine altijd in beweging, anders bestaat het risico dat de verf heet wordt en op sommige plaatsen beschadigd raakt.  
4. Wrijf het gepolijste oppervlak op met de bijpassende Cartec Microvezeldoek.