




REFINISH



PROCESS CHART



AFTER SANDING WITH P1200 AND UPWARDS

DEEP AND LIGHT SCRATCHES

HOLOGRAMS / ONE STEP POLISH



HIGH GLOSS

STEP 1
REFL30

RF2310  RF2316 








STEP 1
REFL30

RF2310  RF2316 

OR

STEP 1
REFL40

RF2410  

STEP 1
REFL90

RF2156 



STEP 1
REFL12

RF2170 



STEP 2
REFL90

RF2156 



STEP 2
REFL90

RF2156 



STEP 2
REFLWC
RF2211C



STEP 2
REFLWC
RF2211C



STEP 3
REFLWC
RF2211C





STEP 3
REFLWC
RF2211C



PANEL SPRAY
Surface Control And Preparation

Panel Spray can be used after each step to identify imperfections and remove any polish residue.



 Rotary
 Dual Action

PROCESSING

1: Wash the car according to the washing process.



2: Evaluate the paint and choose the appropriate option from those shown above. Then, apply a moderate amount of polishing compound onto the polishing pad. Avoid excessive usage.

3: Spread the polish carefully using the polisher at the lowest setting, then gradually increase the speed to the recommended RPM. Always keep the machine in motion to prevent overheating and potential damage to the paint.

4: Gently buff the polished surface with the recommended Cartec Microfiber Cloth.



REFINISH



PROCESKAART



NA HET SCHUREN MET P1200 EN HOGER

DIEPE EN LICHTE KRASSEN

HOLOGRAMMEN / POLIJSTEN IN ÉÉN STAP

HOOGGLANS



STAP 1 REFL30

RF2310
RF2316



STAP 1 REFL30

RF2310
RF2316



OF



STAP 1 REFL40

RF2410




STAP 1 REFL90

RF2156



STAP 1 REFL12

RF2170

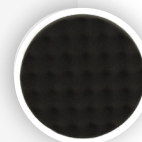

STAP 2 REFL90

RF2156



STAP 2 REFL90

RF2156



STAP 2 REFLWC RF2211C



STAP 2 REFLWC RF2211C



STAP 3 REFLWC RF2211C



STAP 3 REFLWC RF2211C



PANEL SPRAY

Surface Control And Preparation

Panel Spray kan na elke stap worden gebruikt om imperfecties vast te stellen en polijstresten te verwijderen.

Roterend
 Dual Action

VERWERKEN

1: Was de auto volgens het wasproces.



2: Beoordeel de lak en kies de juiste optie uit de bovenstaande opties. Breng een gematigde hoeveelheid polijstpasta aan op de polijstpad. Vermijd overmatig gebruik.

3: Verdeel het polijstmiddel met de polijstmachine op de laagste stand en verhoog vervolgens de snelheid tot het aanbevolen toerental. Houd de machine altijd in beweging om oververhitting en mogelijke schade aan de lak te voorkomen.

4: Poets het gepolijste oppervlak voorzichtig schoon met de aanbevolen Cartec Microvezeldoek.